



Installation Manual for the Uzzi Box Spray System

Uzzi Installation Manual

1. Carefully cut the cable ties that hold the hose together, take care not to cut the hose itself.



1.



2.

2. Determine the distance the Uzzi should be installed from the floor by letting the filter lay flat on the floor as shown in picture 2.

3. Now make two marks on the wall where the holes should be drilled to attach the Uzzi to the wall, make sure the Uzzi is straight and not skew before the markings is made.



3.



4. Now drill the holes $\pm 5\text{cm}$ (50mm) deep, make sure the holes is drilled straight and not at an angle.

5. Remove the screws from the Uzzi Spray Machine; take care not to cut the tubing.



5.

6. Insert Wall Plugs into the drilled holes, make sure they go in all the way and are level with the wall.



6.

7. Line the Uzzi Box mounting plates up with the drilled holes, now insert the screws in the wall plugs and secure the Uzzi by tightening the screws.



7.



8. After you have removed the lid from the Silcoat container, insert the hose in the drum and tighten the lid back on if your container permits.



8.

9. The Uzzi Spray System with container should look something like picture 9.



9.

10.



10. Now you can carefully cut the remaining cable ties, once again make sure not to cut the tubing.

11. Plug the Uzzi into the power supply and switch it "ON" at the wall. Your Uzzi should look something like picture **11.1**



11.



11.1

12. Switch the Uzzi 'ON' on the side of the box, UP or DOWN is 'ON' and the middle is 'OFF'. (Some of the older machines do not have this switch on the box and the 'ON/OFF' must be done from the wall plug itself)



12.



13.

13. The machine might make a noise when switched on, this is due to air in the system, open the bleeding valve as shown in picture **13** by pushing the valve down- water and air will exit the valve, make sure to hold a little bucket underneath.

14. Keep the valve open till Silcoat Pan Release exits continuously- after this keep the valve open for another 3-5 seconds, close the valve by pushing it up.



14.



15.

15. Now you also need to bleed the spray gun in a bucket by pulling the trigger for 2-3 seconds, stop and repeat till all the air is out. You will know the machine is bled completely and that all the air is out when there is no drizzling when you pull and leave the trigger- when you leave the trigger the nozzle must shut off straight away with no more drops exiting.

You might have to open the bleeding valve once or twice more and bleed the spray gun also once or twice more to reach a complete airless spray system.

WARNING:

**Do Not Use Any Other Product,
It Will Damage The System**

SILCOAT
Advanced pan coating